


⚠ The functionality for the motor controller that needs to be achieved is:  
 - Stop the motor controller when the batteries are empty or it is not allowed to discharge anymore.  
 - In case of regeneration: stop or reduce the charger(s) when the batteries are fully charged or if it is not allowed to charge.

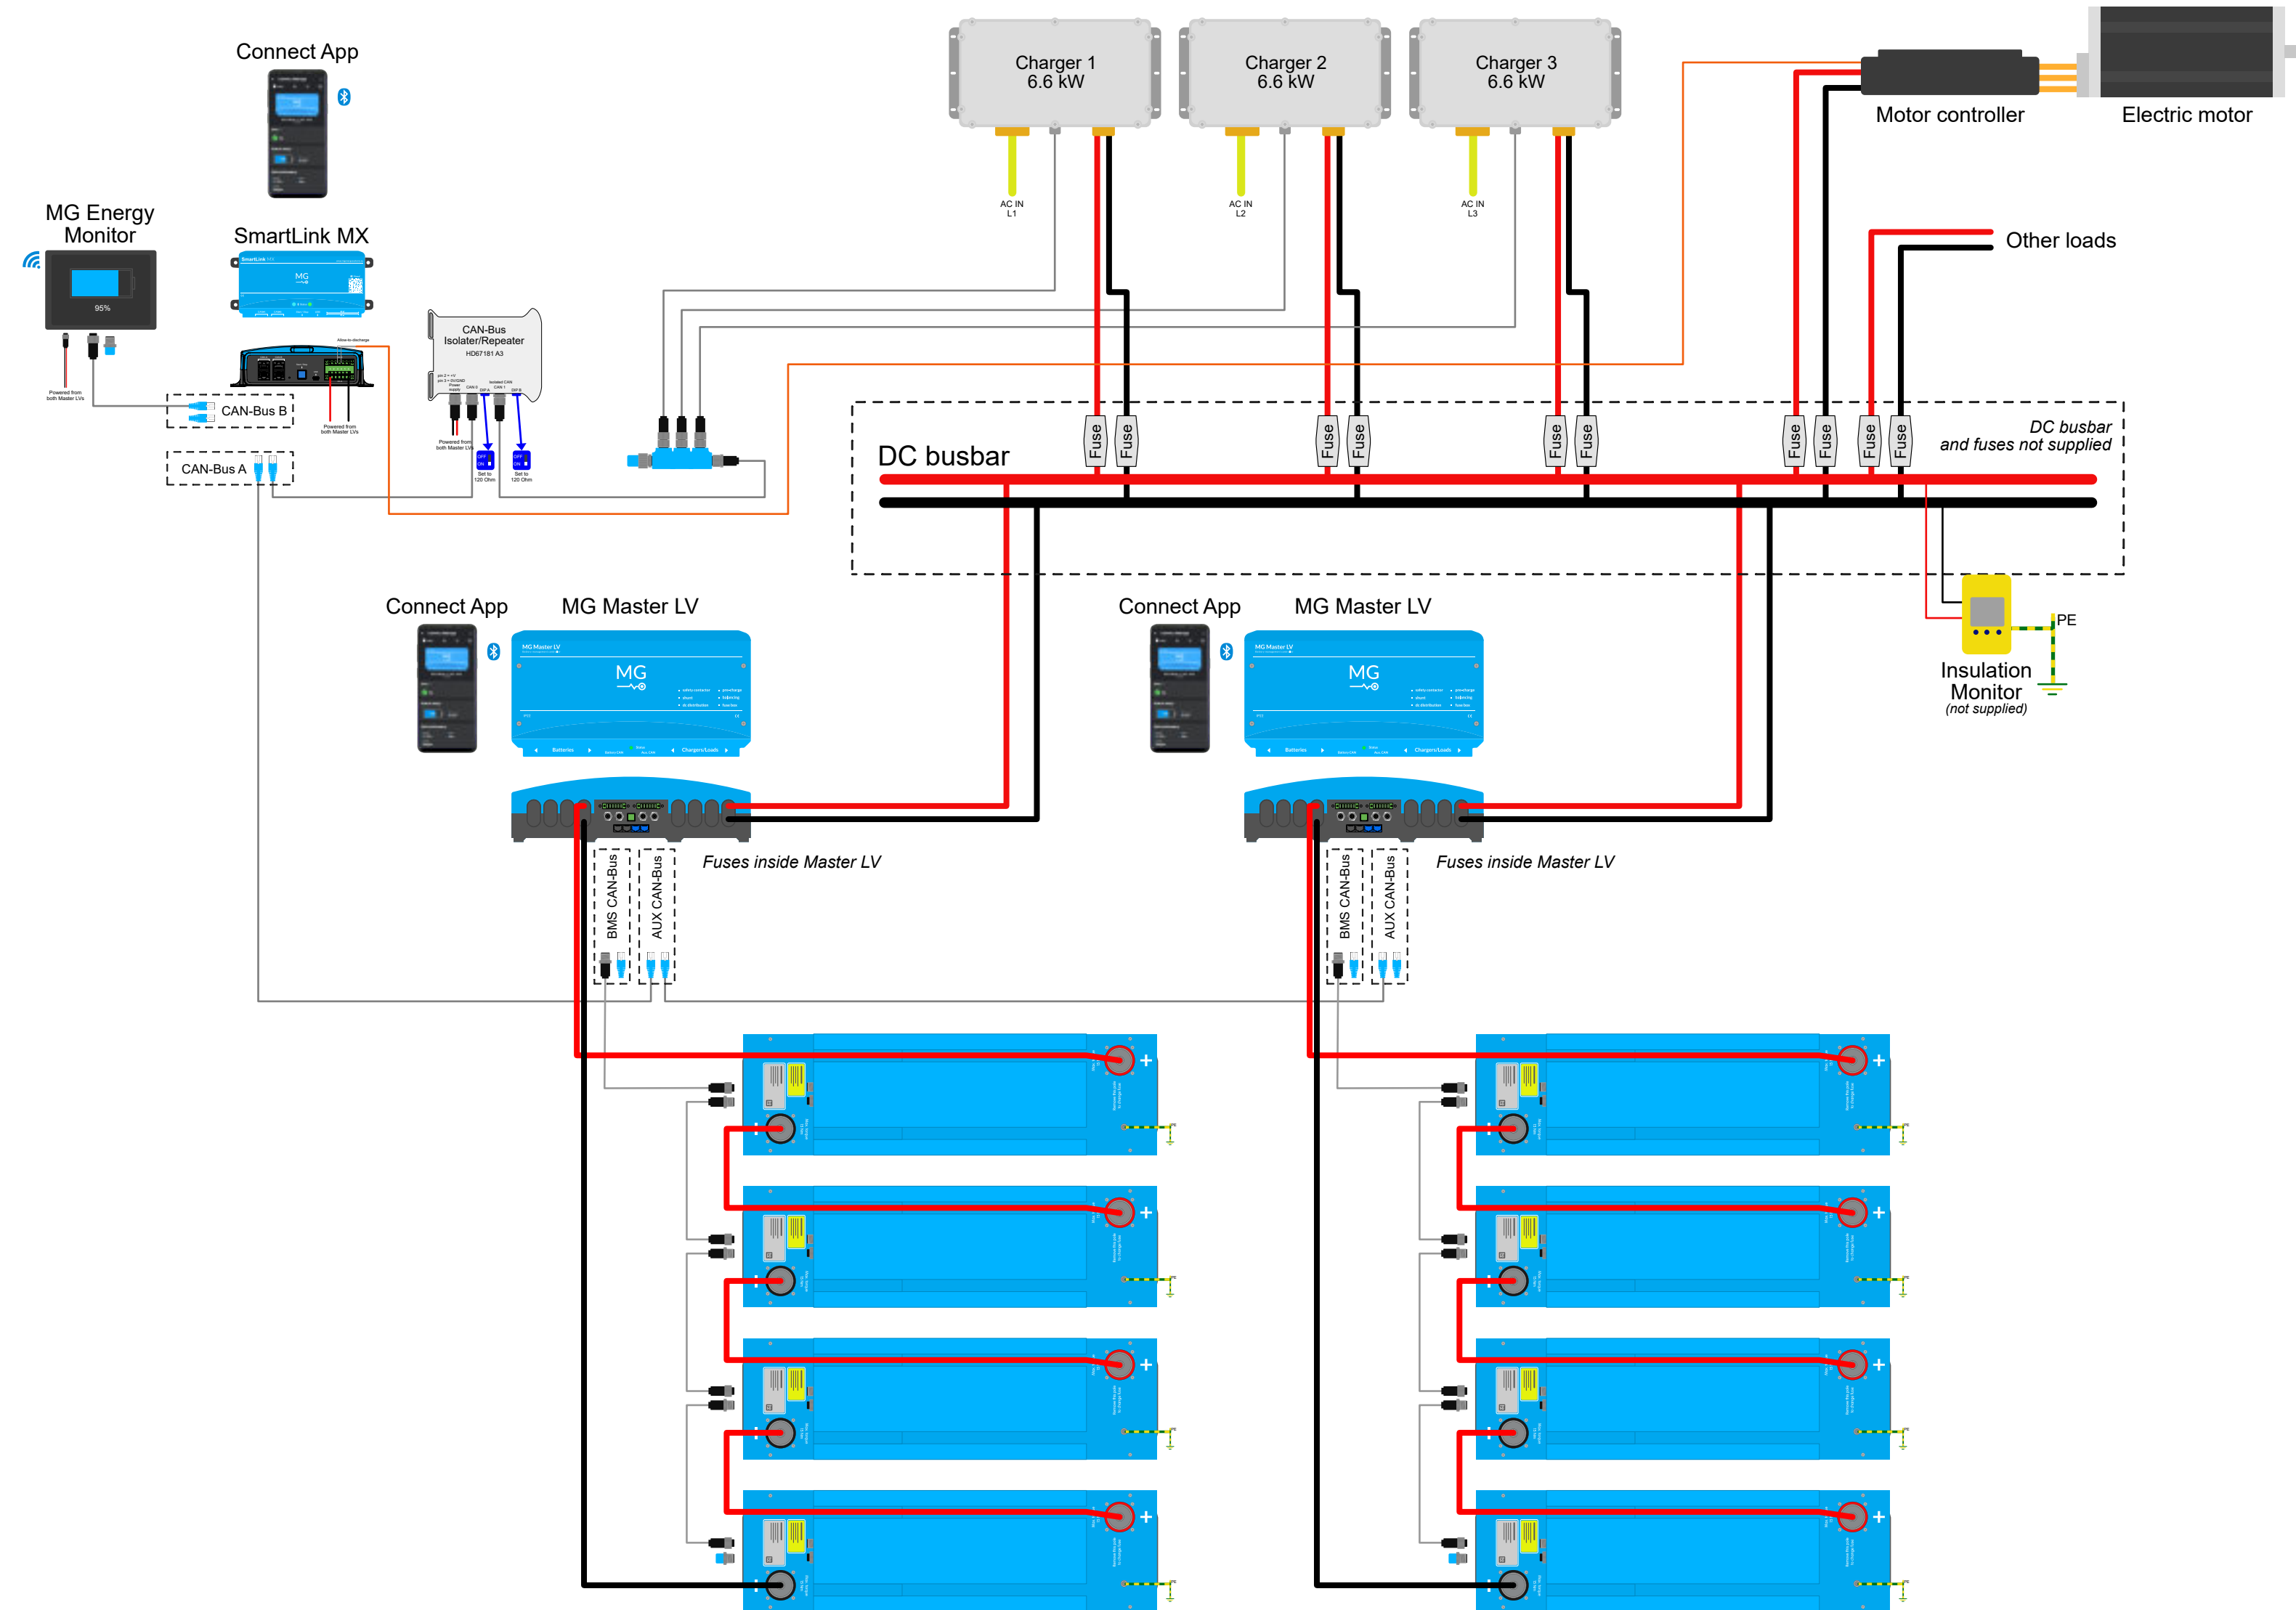

Title	96V-2x4-lfp-tc-charger-smartlink-mx
Version	1.0
Date	25-05-2023